

## C13-SMS function list

name	Features	SMS command	instruction	remark
LED indicator	Red Power light	Flashing, the external power supply works normally		
	Green GSM light	Fast flashing: no GSM signal, network failure. Constant light: GPRS connection		
	Blue GPS light	If the light is always on, the GPS has been positioned; if it is always off, the GPS is off		
SMS	Set IP and port	STIP:219.150.56.178,8066		
	Read IP and port	RDIP		
	Set domain name and port	STDN:wrt.watretgps.com,6100		
	Read domain name and port	RDDN		
	Set IMEI number	STIM:355551234567890		
	Read IMEI number	RDIM		
	Read device status	RDST		
	oil cut/recovery	STOC-CUT STOC-OK	1. Sending the power-off instruction can be successful when it is sleeping. 2. When the GPS is not positioned, the power will be turned off after sending the instruction, but it is not actually disconnected. You should wait until the GPS positioning is successful before sending the instruction to succeed.	CUT: disconnect; OK: restore
	Reboot	REST		
	Set the displacement alarm threshold	STWY:300		When set to 0, turn off; the setting range is 100-1000
Set vibration alarm switch	STVA:1	OK	1: open; 0: close	